

MAINTENANCE INSTRUCTIONS


1/2" IMPACT WRENCH

MODEL MI-20S

TOKU

TOKU PNEUMATIC PRODUCTS

EXPLODED VIEW

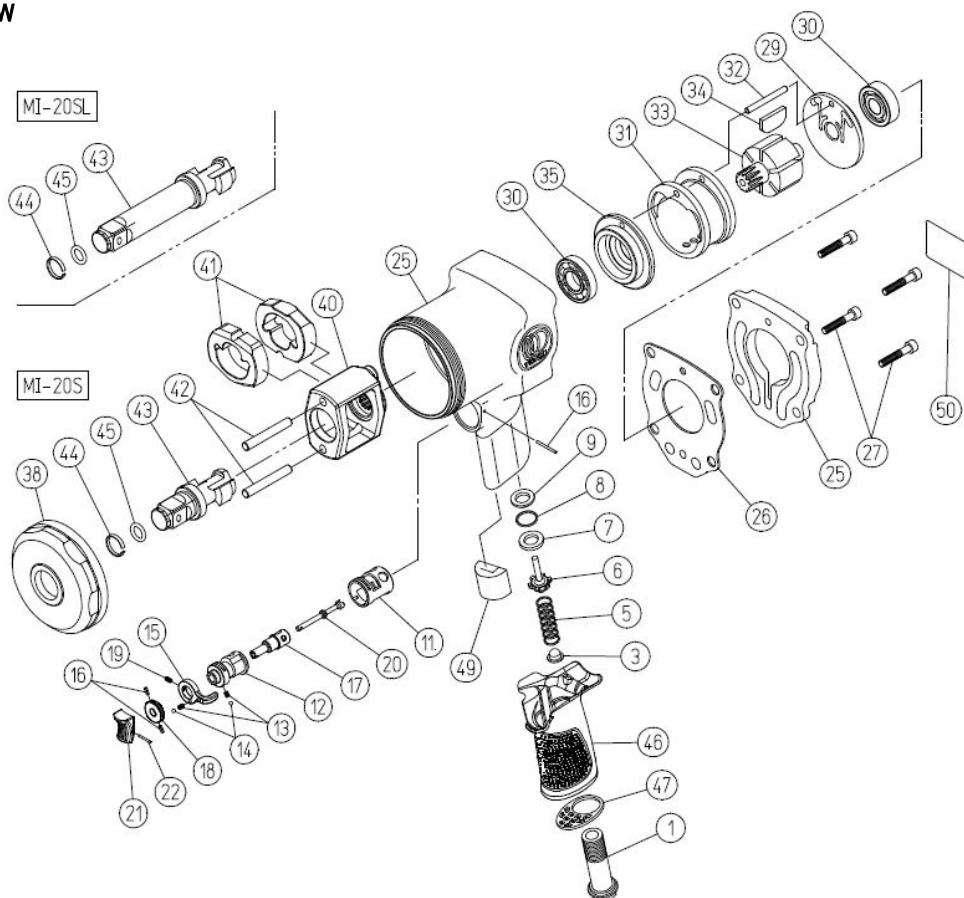

PARTS LIST

Symbol No.	Parts No.	Description	Q'ty Req'd
MI-20S			
1	43-19-87-840	Air Inlet (PT)	1
3	13-68-03-049	Air Screen	1
5	13-08-03-181	Throttle Valve Spring	1
6	43-13-94-080	Throttle Valve	1
7	13-68-04-207	Throttle Valve Seat	1
8	13-11-03-015	O Ring S-18	1
9	43-13-95-D80	Throttle Valve Spacer	1
11	43-18-96-201	Reverse Valve Bushing	1
12	43-18-96-212	Reverse Valve	1
13	13-08-09-005	Spring 3X4(0.4)	2
14	13-05-02-008	Steel Ball 1/8	2
15	43-18-96-231	Reverse Valve Lever	1
16	13-06-02-208	Corrugated Spring Pin 2X8	2
17	43-18-96-151	Control Valve	1
18	43-18-96-261	Control Valve Knob	1
19	13-22-03-006	Hex. Socket Seat Screws M3X6	1
20	43-18-96-100	Throttle Push Pin	1
21	13-67-03-076	Trigger	1
22	13-06-01-134	Spring Pin 1.6X14	1
23	13-04-06-022	Parallel Pin 2X25	1
25	43-19-87-010	Motor Housing	1
26	43-19-87-350	Housing Cover	1
27	13-62-02-060	Housing Cover Gasket	1
28	13-17-06-025	Hex Socket Head Cap Screw M6X25	4
29	43-19-87-370	Rear End Plate	1

Symbol No.	Parts No.	Description	Q'ty Req'd
30	13-01-20-005	Bearing EE-5	2
31	43-19-87-360	Liner	1
32	43-19-87-A70	Liner Pin	1
33	43-19-87-390	Rotor	1
34	13-71-07-024	Vane	8
35	43-19-87-380	Front End Plate	1
38	43-19-87-520	Clutch Housing	1
40	43-19-87-440	Hammer Frame	1
41	43-18-96-450	Hammer	2
42	43-18-96-460	Hammer Pin	2
43	43-19-87-500	Anvil Shank	1
44	13-08-03-113	Socket Retainer	1
45	13-11-01-013	O Ring P12.5	1
47	13-66-07-104	Grip	1
48	13-74-03-030	Exhaust Deflector	1
49	13-74-03-035	Silencer	1
51	13-73-05-239	Name plate	1
43-19-87-50C		Anvil Shank CP (Incl. Symbol No. 43, 44, 45)	(1CP)
MI-20SL			
43	43-19-01-900	Anvil Shank L	1
43-19-01-90C		Anvil Shank L CP (Incl. Symbol No. 43, 44, 45)	(1CP)
NPT Screw Version			
1	43-19-87-850	Air Inlet (NPT)	(1)
1st edition			