


# RRI-SP20705

## SCREWDRIVER (PISTOL TYPE)

EDITION: D

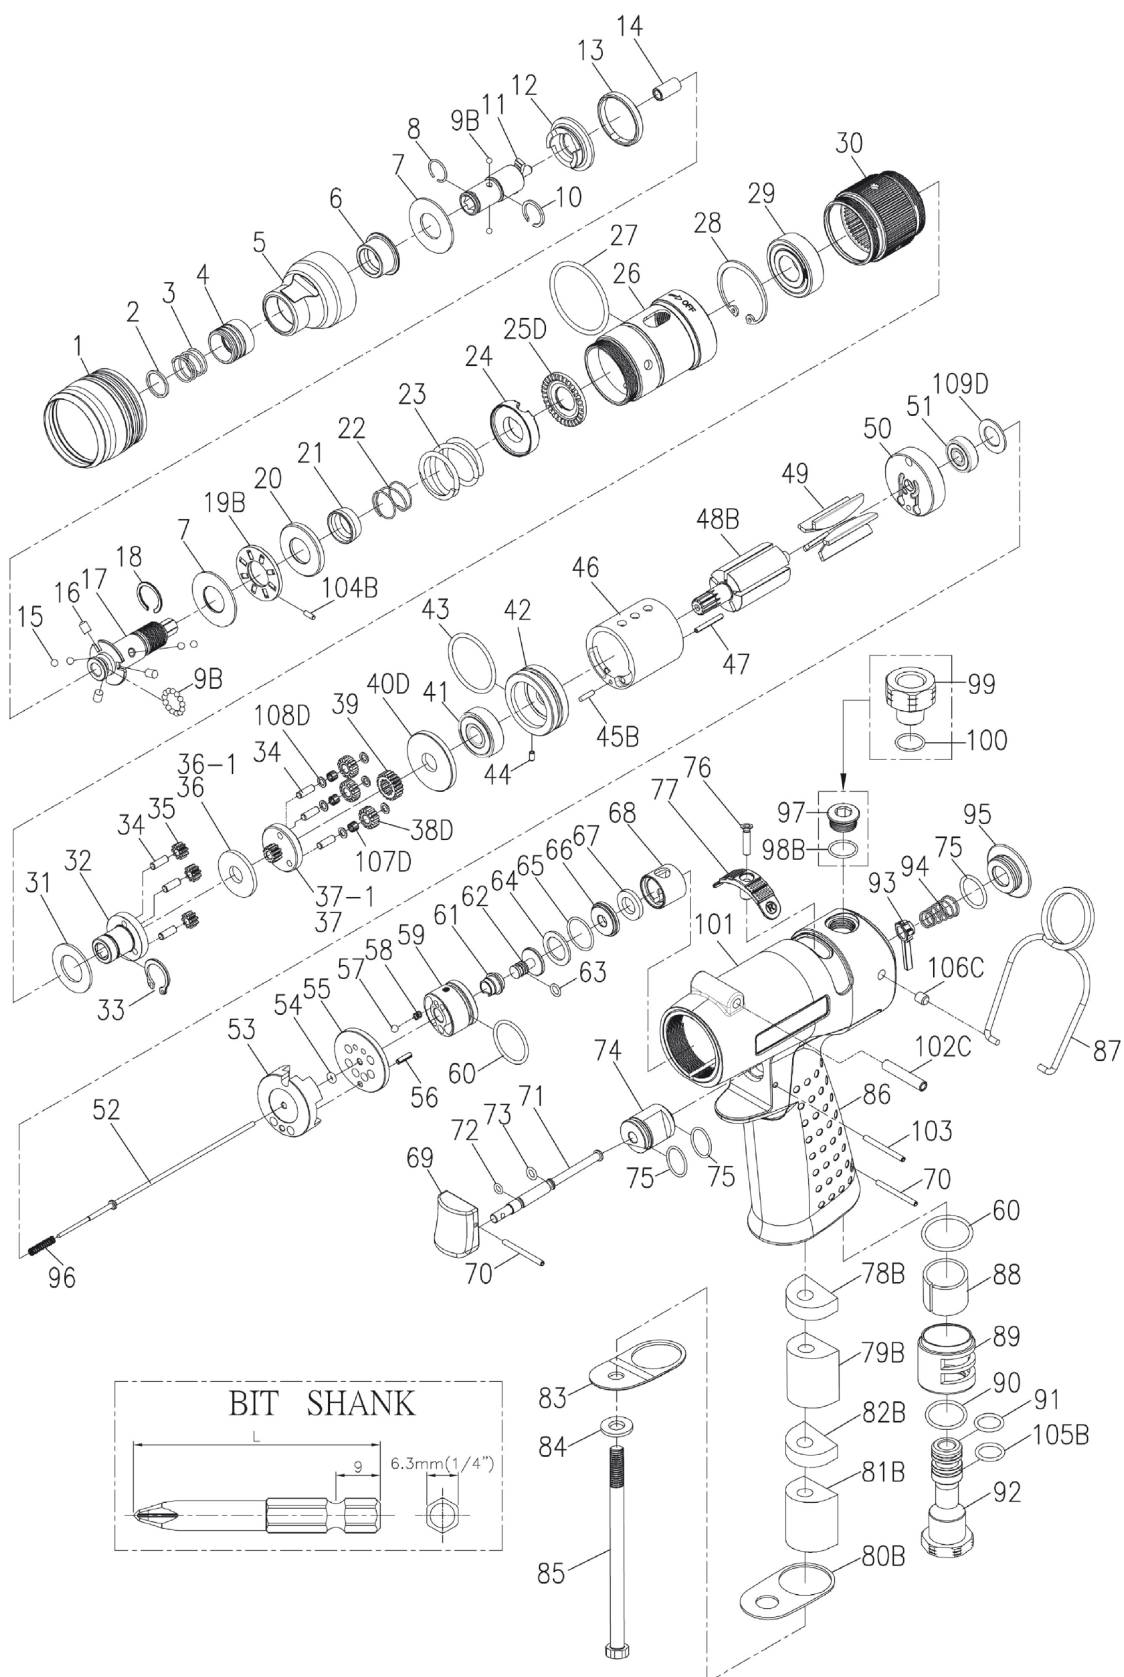

# RRI-SP20705 SCREWDRIVER (PISTOL TYPE)

EDITION: D

| Index No. | Part No.   | Description             | Q'ty |
|-----------|------------|-------------------------|------|
| 1         | B20S-207   | Adjusting Cover         | 1    |
| 2         | B20S-415   | Spring Washer           | 1    |
| 3         | B20S-418   | Spring                  | 1    |
| 4         | B20S-417   | Quick Change Holder     | 1    |
| 5         | B20S-420   | Housing Cover           | 1    |
| 6         | B20S-202   | Anvil Bushing           | 1    |
| 7         | 00-1516    | Washer (Ø12 x Ø26 x 1t) | 2    |
| 8         | B20S-428B  | Anvil Collar B          | 1    |
| 9B        | 00-3835    | Steel Ball (Ø2.5)       | 15   |
| 10        | B20S-428A  | Anvil Collar A          | 1    |
| 11        | B20S-405   | Anvil                   | 1    |
| 12        | B20S-425   | Clutch Ring             | 1    |
| 13        | B20S-424   | Ejector Ring            | 1    |
| 14        | 00-6301    | DU Bearing              | 1    |
| 15        | 00-3826    | Steel Ball (Ø3)         | 4    |
| 16        | B20S-426   | Ejector Pin             | 3    |
| 17        | B20S-416   | Transmission Shaft      | 1    |
| 18        | B20S-428C  | Anvil Collar C          | 1    |
| 19B       | B20S-410   | Washer                  | 1    |
| 20        | B20S-433   | Spring Seat             | 1    |
| 21        | B20S-449   | Control Ring            | 1    |
| 22        | B20S-427   | Spring                  | 1    |
| 23        | B20S-429   | Spring                  | 1    |
| 24        | B20S-431   | Adjusting Lock Ring     | 1    |
| 25D       | B20S-430-B | Adjusting Nut           | 1    |
| 26        | B20SL-201  | Clutch Housing          | 1    |
| 27        | 00-41222   | O-Ring (Ø25 x Ø2)       | 1    |
| 28        | 00-3113    | Snap Ring (R28)         | 1    |
| 29        | 00-2305A   | Ball Bearing (6001)     | 1    |
| 30        | C20S-440   | Internal Gear           | 1    |
| 31        | C20S-441   | Washer                  | 1    |
| 32        | C20S-442   | Front Gear Cage         | 1    |
| 33        | 00-3507    | Snap Ring (S12)         | 1    |
| 34        | 00-3424    | Pin (Ø3 x 8L)           | 6    |
| 36-1      | C20S-444B  | Washer B (2 m/m)        | 1    |
| 37-1      | C20S-452B  | Rear Gear Cage B Assem. | 1    |
| 38D       | C30S-443A  | Planet Gear A           | 6    |
| 40D       | C30S-448   | Rear Cover              | 1    |
| 41        | 00-2332    | Ball Bearing (608ZZ)    | 1    |
| 42        | B20S-301   | Front Plate             | 1    |
| 43        | 00-41177   | O-Ring (Ø25,12 x Ø1,78) | 1    |
| 44        | 00-3328    | Spring Pin (Ø2 x 4L)    | 1    |
| 45B       | 00-3430    | Pin (Ø2 x 8L)           | 1    |
| 46        | C20S-302   | Cylinder                | 1    |
| 47        | 00-3344    | Spring Pin (Ø2 x 16L)   | 1    |
| 48B       | CS20S-303  | Rotor                   | 1    |
| 49        | B20S-304   | Rotor Blade             | 5    |
| 50        | C20S-305   | Rear Plate              | 1    |
| 51        | 00-2355    | Ball Bearing (625Z)     | 1    |
| 52        | B20-314    | Valve Stem              | 1    |
| 53        | B20-519    | Transfer Valve          | 1    |
| 54        | 00-41113   | O-Ring (Ø2 x Ø1,5)      | 1    |
| 55        | B20-520    | Transmission Washer     | 1    |
| 56        | 00-3325    | Spring Pin (Ø2 x 6L)    | 1    |
| 57        | 00-3805    | Steel Ball (1/8")       | 1    |
| 58        | I100-506   | Spring                  | 1    |

| Index No. | Part No.      | Description           | Q'ty |
|-----------|---------------|-----------------------|------|
| 59        | B20-502       | Reverse Valve         | 1    |
| 60        | 00-41145      | O-Ring (Ø18 x Ø1,5)   | 2    |
| 61        | B20-526       | Guide Ring            | 1    |
| 62        | B20-318       | Shut Bar              | 1    |
| 63        | 00-4190       | O-Ring (Ø4 x Ø1)      | 1    |
| 64        | B20-533       | Washer                | 1    |
| 65        | 00-41211      | O-Ring (Ø14 x Ø1)     | 1    |
| 66        | B20-522       | Washer                | 1    |
| 67        | B20-319       | Bushing               | 1    |
| 68        | B20-521       | Bushing               | 1    |
| 69        | B20-504       | Trigger               | 1    |
| 70        | 00-3346       | Spring Pin (Ø2 x 20L) | 2    |
| 71        | B20-510       | Pin                   | 1    |
| 72        | 00-41105      | O-Ring (Ø3 x Ø1)      | 1    |
| 73        | 00-41231      | O-Ring (Ø2,5 x Ø2)    | 1    |
| 74        | B20-530       | Valve                 | 1    |
| 75        | 00-41175      | O-Ring (Ø13 x Ø1,5)   | 3    |
| 76        | 00-0511       | Screw (M3 x 14L)      | 1    |
| 77        | B20-503       | Reverse Knob          | 1    |
| 78B       | B20-601B      | Muffler               | 1    |
| 79B       | B20-601D      | Muffler               | 1    |
| 80B       | B20-607-B     | Gasket                | 1    |
| 81B       | B20-601A      | Muffler               | 1    |
| 82B       | B20-601C      | Muffler               | 1    |
| 83        | B20-608       | Deflector Cap         | 1    |
| 84        | B20-609       | Washer                | 1    |
| 85        | 00-0149       | Screw (M6 x 95L)      | 1    |
| 86        | B20-103       | Housing Rubber        | 1    |
| 87        | I40S-102      | Hanger                | 1    |
| 88        | I40-601       | Muffler               | 1    |
| 89        | B20-603       | Exhaust Deflector     | 1    |
| 90        | 00-41111      | O-Ring (Ø16 x Ø1,5)   | 1    |
| 91        | 00-41247      | O-Ring (Ø10,5 x Ø1,5) | 1    |
| 92        | B20-604A      | Air Inlet 1/4" PF-19  | 1    |
|           | B20-604B      | Air Inlet 1/4" PT-19  |      |
|           | B20-604C      | Air Inlet 1/4" NPT-18 |      |
| 93        | B20-523       | Valve Stem            | 1    |
| 94        | C20S-515      | Spring                | 1    |
| 95        | B20-104       | Screw Cap             | 1    |
| 96        | CS20SL-317    | Spring                | 1    |
| 97        | B20-107       | Set Screw             | 1    |
| 98B       | 00-41254      | O-Ring (Ø8 x Ø1,5)    | 1    |
| 99        | C20-604A      | Air Inlet 1/4" PF-19  | 1    |
|           | C20-604B      | Air Inlet 1/4" PT-19  |      |
|           | C20-604C      | Air Inlet 1/4" NPT-18 |      |
| 100       | 00-4118       | O-Ring (P10A)         | 1    |
| 101       | B20-101       | Motor Housing         | 1    |
| 102C      | B20-108A      | Bushing               | 1    |
| 103       | I100-511      | Pin                   | 1    |
| 104B      | 00-3471       | Pin (Ø2,5 x 4L)       | 8    |
| 105B      | 00-4107       | O-Ring (P9)           | 1    |
| 106C      | B20-108B      | Bushing               | 2    |
| 107D      | 00-3477       | Pin (Ø0,5 x 3L)       | 132  |
| 108D      | 33239-WRCA-05 | Washer                | 12   |
| 109D      | BS30R-160-607 | Gasket                | 1    |