


RRI-BCA16H2 CORDLESS TRANSDUCERIZED TOOL (5-16 NM)

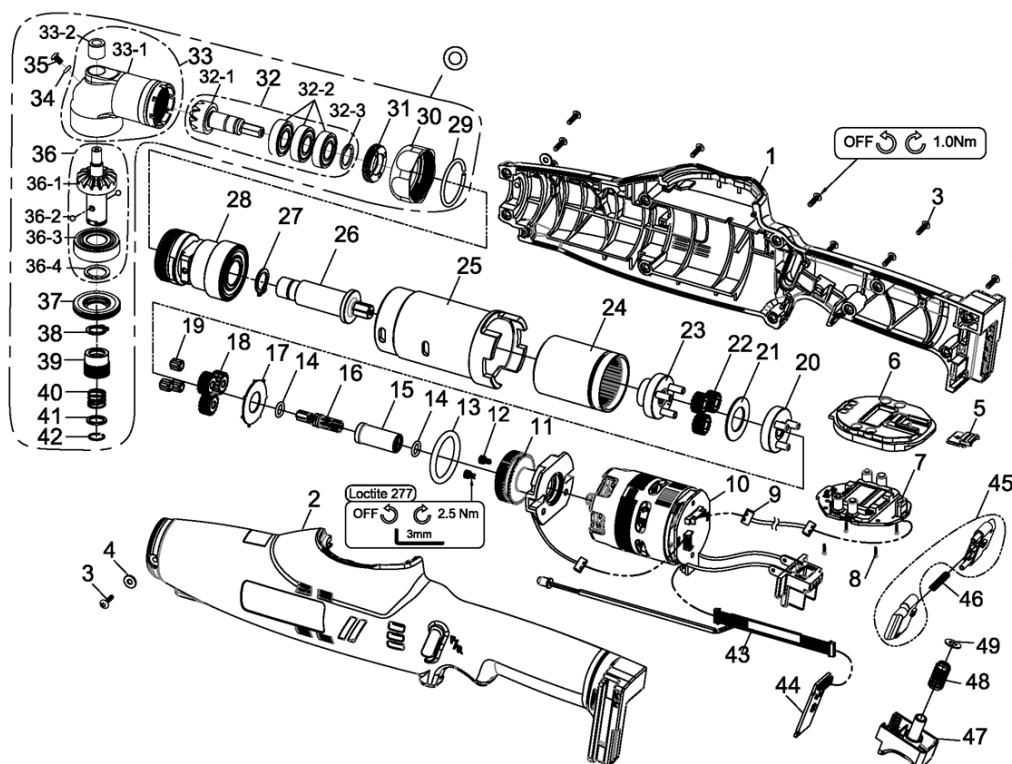

Index No.	Part No.	Description	Q'ty
1	33101-NRA	Upper Housing	1
2	33102-NRA	Lower Housing	1
3	000-1430C	Screw (M3xP0.5x10L)	14
4	000-1531B	Washer (ø3.3xø8)	2
5	33110-NPA-02	Cover	1
6	33110-NRA-03	Cover	1
7	32076-NRA-01	LCM Board Assembly	1
8	0-151018	Screw (ø2.6x6L)	4
9	B86PW35	Connector Wire	1
10	32083-NRA-03	Brushless Motor ;w/driver	1
11	32046-NRA-03	Transducer Assembly	1
12	0-101066	Screw (M4x11L)	2
13	0-431022	O-Ring (P26)	1
14	00-41255	O-Ring (S7)	2
15	33242-NRA-01	Sleeve Coupling	1
16	33249-NRA-04	Sun Gear	1
17	D39SC180B-4	Washer	1
18	D49WRB-9	Planet Gear	3
19	000-2415	Needle Bearing (INA-K357)	3
20	32051-WRBA-10	Gear Cage Assembly	1
21	D39WR-8	Washer	1
22	D49WR-9	Planet Gear	3
23	32051-NRA-02	Gear Plate Assembly	1
24	32049-NRA-01	Gear Ring Assembly	1
25	33251-NRA-02	Retaining Seat	1
26	33243-NRA-01	Shaft	1
27	000-3012	Snap Ring (STW-12)	1
28	32051-NRA-05	Connecting Holder Assy.	1
⊙	32042-WRBA-H2-03	Angle Housing Units	1
29	D44WR108B	Collar	1

Index No.	Part No.	Description	Q'ty
30	D54WR108B#BZ	Lock Nut	1
31	D54WR108B-1B	Lock Nut	1
32	32049-WRBA-02	Main Bevel Gear Assy.	1
	(1)33249-WRBA-16	Main Bevel Gear	1
	(2)0-201023-1	Ball Bearing (6900ZZ)	3
	(3)0-331002	Inverted Ret. Ring (ISTW-10)	1
33	32042-WRCA-03	Angle Housing Assembly	1
	(1)33242-WRCA-05	Angle Housing	1
	(2)0-211005	Needle Bearing (BK0609)	1
34	0-451019	O-Ring (ø2*ø1.5)	1
35	0-121002	Screw (M3x5L)	1
36	32049-WRBA-H2-01	Bevel Gear Assembly	1
	(1)33249-WRBA-19	Bevel Gear	1
	(2)000-3833	Steel Ball (ø3)	2
	(3)0-201033-1	Ball Bearing (6001-2RSH)	1
	(4)0-331003	Inverted Ret. Ring (ISTW-12)	1
37	D54WR108B-2B	Lock Nut	1
38	000-3011	Snap Ring (STW-11)	1
39	D42ID144A	Quick Change Holder	1
40	D48ID144A	Spring	1
41	D39ID144A	Hold Spacer	1
42	D44ID144A	Anvil Collar	1
43	33386-NRA-01	LED Wire Set	1
44	E76WR	PC Board	1
45	B09PW15-1#B1	F/R Valve (1setx2pcs)	1
46	D48PW15-1	Spring	1
47	B09PW15#B1	Trigger Assembly	1
48	D48PW15	Spring	1
49	C39PW15-3	Washer	1